
DUPONT™


Tyvek®

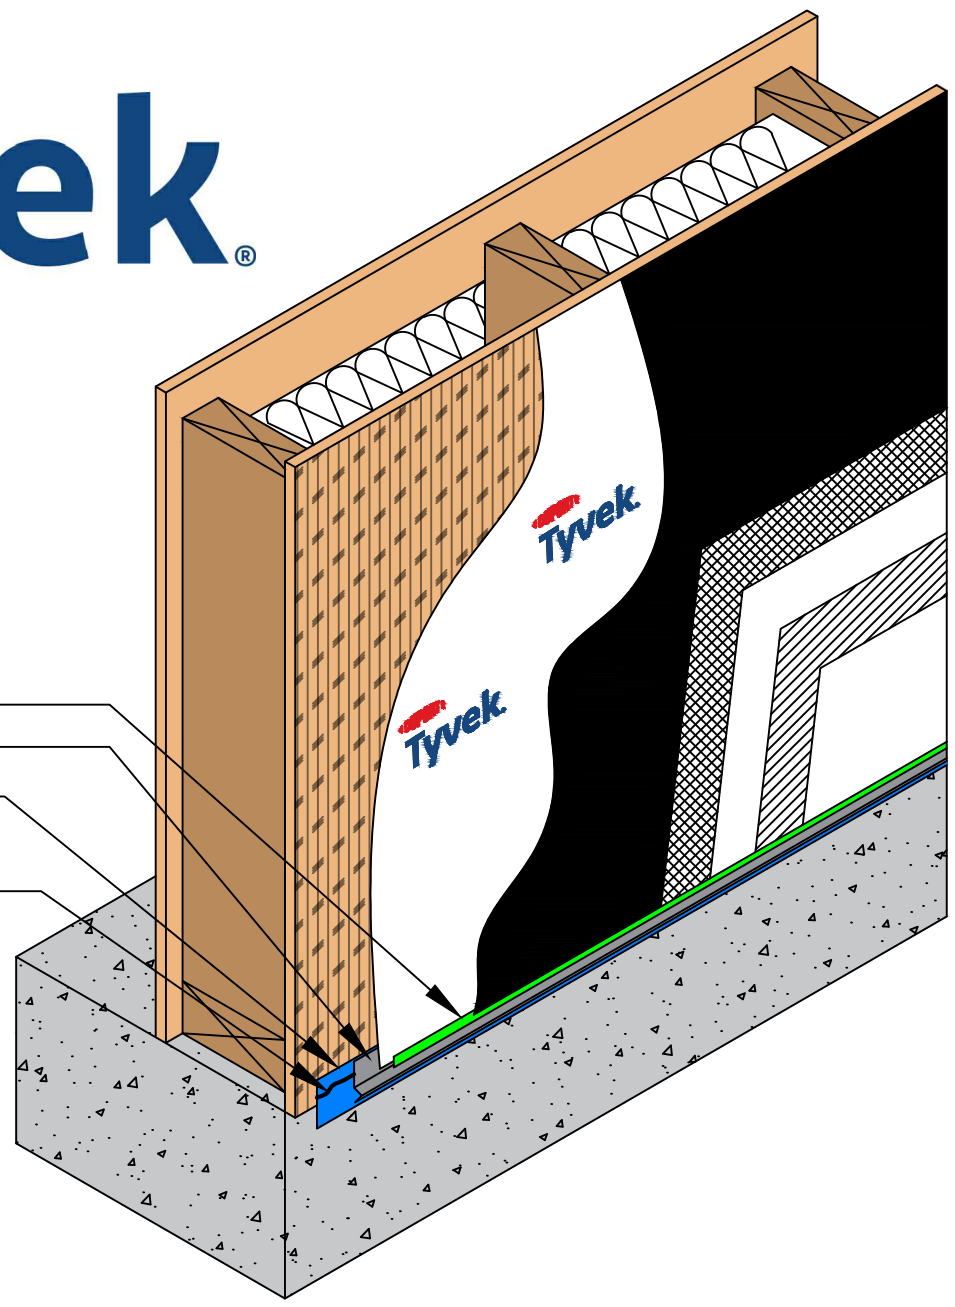

Typical Wall

INTERIOR GYPSUM BOARD
WOOD STUDS W/ BATT INSULATION
OSB
DUPONT™ TYVEK® HOMEWRAP
INTERVENING LAYER
WIRE LATH
SCRATCH COAT
BROWN COAT
FINISH COAT

2" DUPONT™ TYVEK® TAPE
WEEP SCREED
DUPONT™ FLASHING TAPE
(primer required on concrete)
RECOMMENDED BEST PRACTICE FOR INCREASED AIR HOLDOUT APPLY APPROVED SEALANT OR GREAT STUFF PRO GAPS AND CRACKS FOAM BEHIND WEEP SCREED

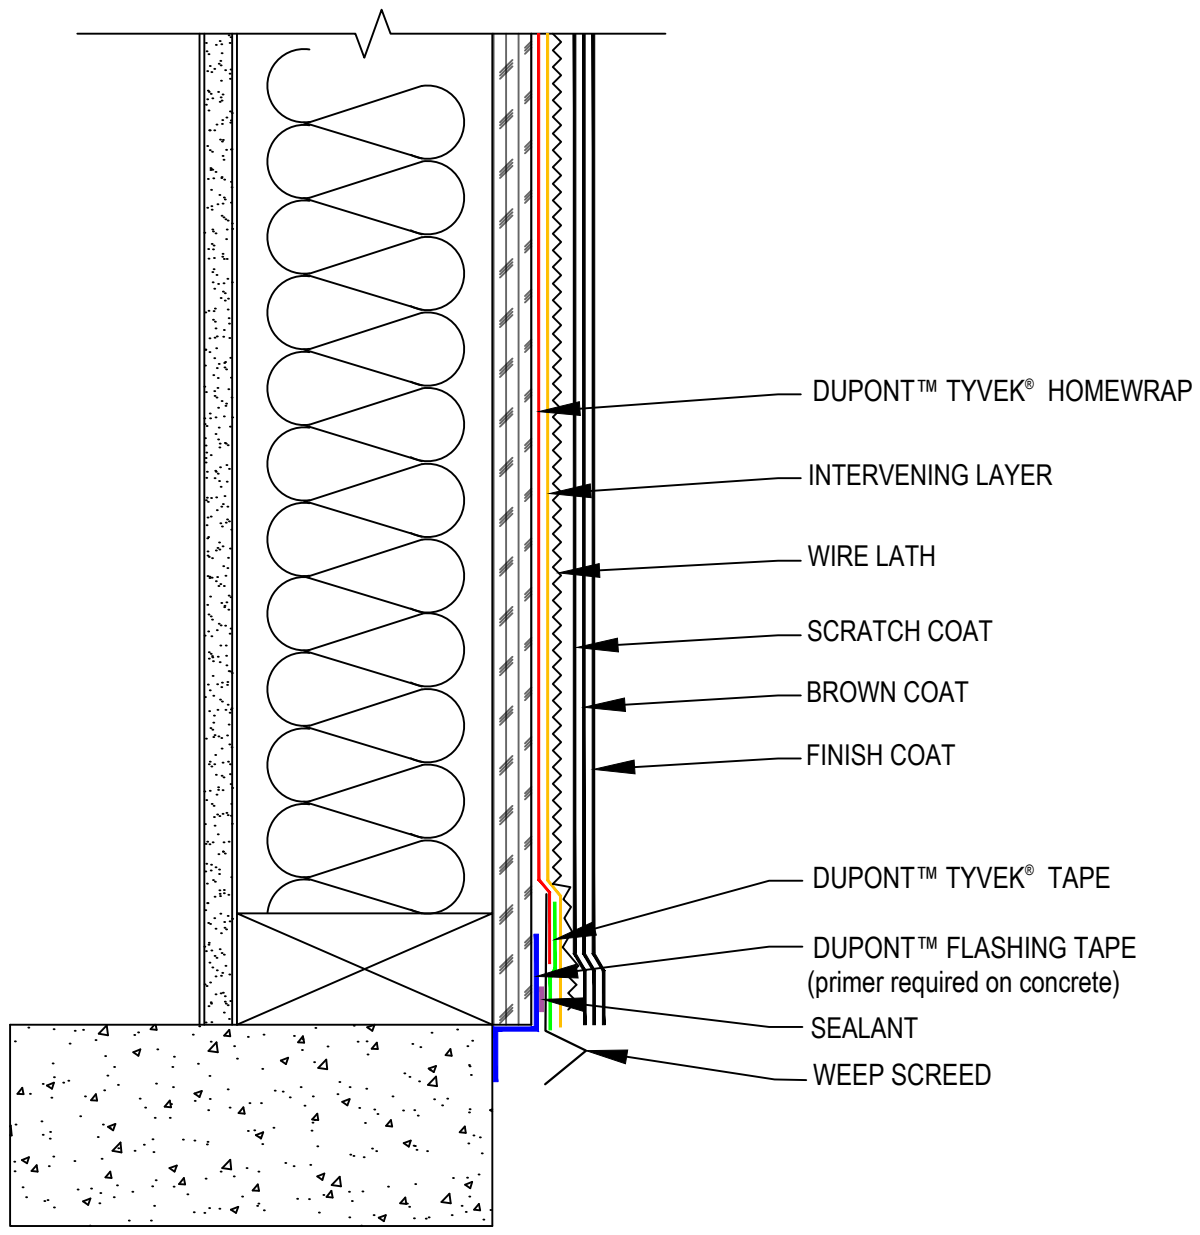

NOTES

1. REPAIR MINOR HOLES WITH DUPONT™ TYVEK® TAPE.
2. LOCAL LAWS, ZONING, AND BUILDING CODES VARY AND THEREFORE GOVERN OVER MATERIAL SELECTION AND DETAILING SHOWN.
3. FOR ADDITIONAL INFORMATION REGARDING PRODUCT INSTALLATION, REFER TO THE APPLICABLE DUPONT™ INSTALLATION GUIDELINE.

SCALE: NOT TO SCALE	TYVEK BASE OF WALL AIR BARRIER - STUCCO
REVISION DATE: 9/19/24	
DRAWN BY: Korey A. Reed	

RMS
Risk Management Solutions