
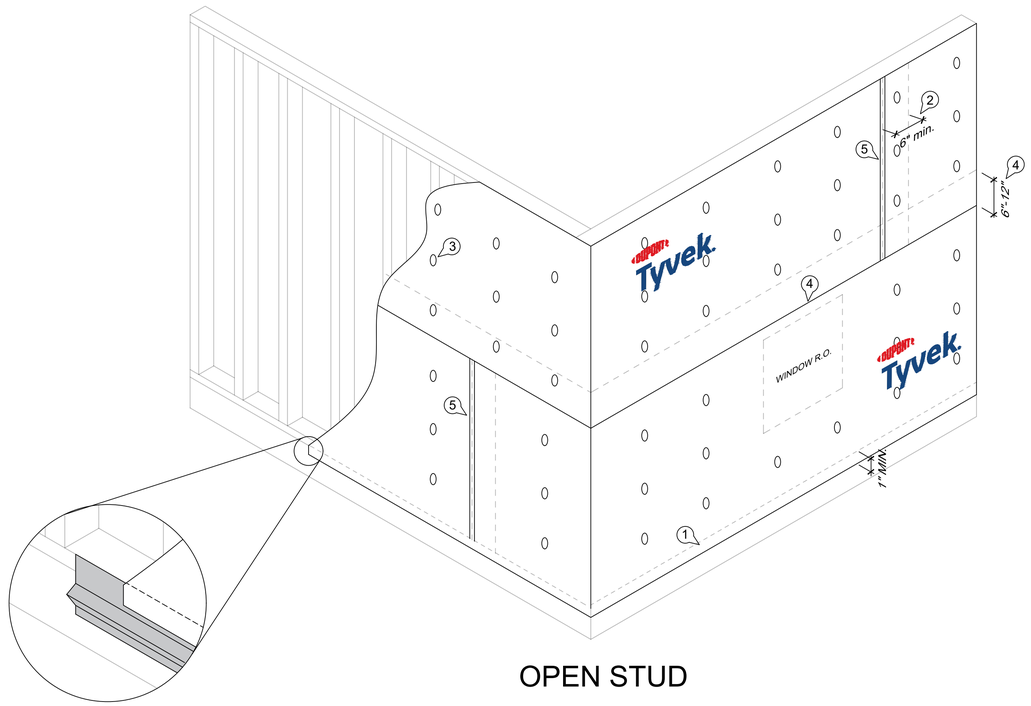


OPEN STUD

FOR STUCCO APPLICATIONS, INTEGRATE TYVEK WRB OVER WEEP SCREED

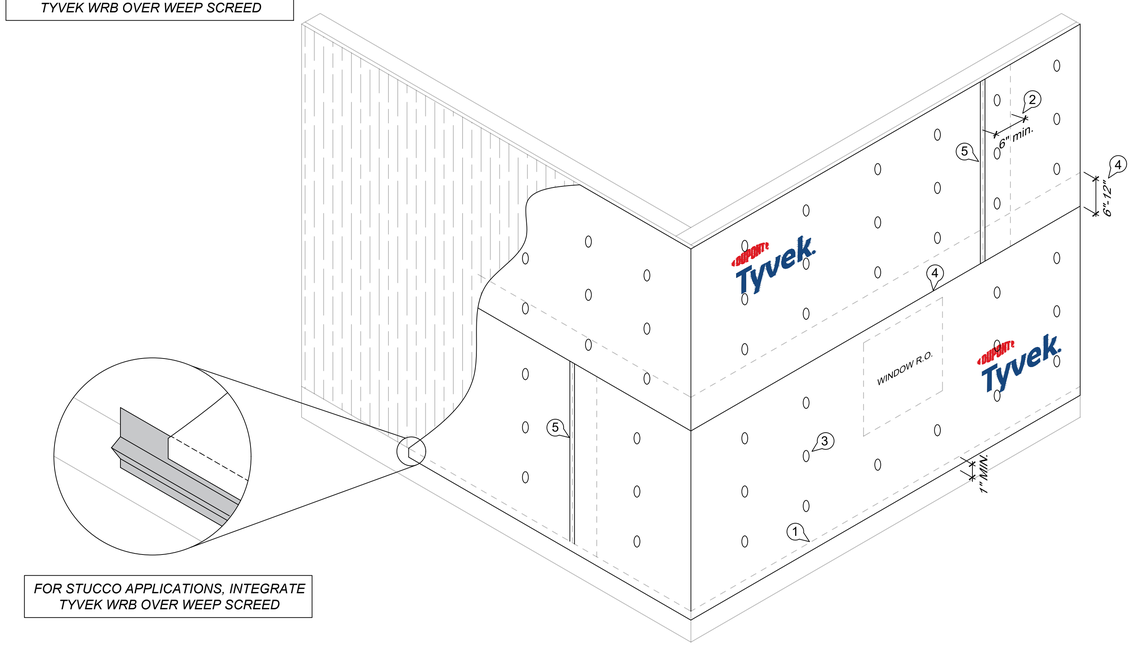


FOR STUCCO APPLICATIONS, INTEGRATE TYVEK WRB OVER WEEP SCREED

SHEATHED

STEP 1

ALIGN ROLL AT BOTTOM CORNER OF STRUCTURE. ROLL SHOULD BE PLUMB. BOTTOM EDGE OF ROLL MUST:(A) FOR SIDING APPLICATIONS EXTEND OVER SILL PLATE INTERFACE ONTO FOUNDATION BY AT LEAST 1" (2" OR GREATER IS RECOMMENDED) (B) FOR STUCCO APPLICATIONS LAP TYVEK OVER WEEP SCREED. (C) LAP TYVEK HOMEWRAP OVER ALL FLASHINGS (I.E. STEP FLASHING, WALL TO ROOF INTERSECTIONS AND THROUGH WALL FLASHINGS).

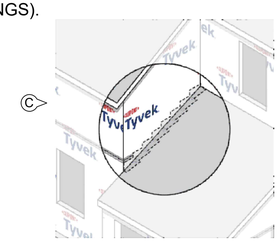

STEP 2

UNWRAP 6" BEYOND CORNER AND INCLUDE 6" MIN. OVERLAP AT CORNER. UNROLL DIRECTLY OVER WINDOWS AND DOORS. OVERLAP ALL VERTICAL SEAMS BY 6"– 12"

STEP 3

SECURE TYVEK® WRB TO THE STUD OR OTHER NAIL-BASE MATERIAL, I.E., WOOD SHEATHING USING CAP STAPLES.CAP STAPLES SHOULD BE PLACED AT A REDUCED SPACING SCHEDULE AT 24"-48". SECURING ALONG STUD LINES WILL ASSIST IN MAINTAINING FASTENING PATTERN. WHEN INSTALLING WITH FASTENERS THAT ARE LONGER THAN THE THICKNESS OF THE SHEATHING, THE FASTENERS MUST BE INSTALLED INTO THE STUDS. PENETRATING BANDBOARD OR OTHER HORIZONTAL MEMBERS MAY BE NECESSARY TO MAINTAIN FASTENING PATTERN. DO NOT INSTALL FASTENERS WITHIN 6" OF THE SILLS AND JAMBS AND WITHIN 9" OF THE HEAD OF THE WINDOW ROUGH OPENINGS.

STEP 4

FULL HEIGHT OF TYVEK® WRB HOMEWRAP PREFERRED YET WHEN NEEDED, UPPER LAYER(S) OF TYVEK® WRB SHOULD OVERLAP BOTTOM LAYER BY A MINIMUM OF 6". THE TYVEK® WRB MUST BE INTEGRATED WITH WINDOW FASHING USING PROPER SHINGLING. IF NON-SELF-ADHERING SILL FASHING IS USED, INSTALL THE TYVEK® WRB UNDER THE BOTTOM OF THE SILL FASHING TO MAINTAIN PROPER SHINGLING.

STEP 5

TAPE ALL VERTICAL SEAMS WITH DUPONT™ TYVEK® TAPE. TAPING HORIZONTAL SEAMS WITH DUPONT™ TYVEK® TAPE IS ONLY REQUIRED IF TYVEK® WRB HOMEWRAP IS BEING INSTALLED AS AN AIR BARRIER.

DUPONT Tyvek

General Notes

- *SEE PRODUCT SPECIFICATIONS FOR WRB - TYVEK HOMEWRAP OR OTHER AS SPECIFIED*

ALL TYVEK WRB'S MEET OR EXCEED THE REQUIREMENTS OF A WATER-RESISTIVE BARRIER AS DEFINED IN THE 2021 INTERNATIONAL RESIDENTIAL CODE(IRC) AND 2021 INTERNATIONAL BUILDING CODE (IBC).

Revision

#	Date

TYVEK HOMEWRAP INSTALLATION INSTRUCTIONS

DRAWING: Page 1 of 1

DRAWN BY: ALMEIDA MEDO

DATE: 2.25.2024

SCALE: Not to Scale

RMS Risk Management Solutions